

INSTALLATION MANUAL

LED BASE LIGHT

READ AND FOLLOW ALL SAFETY INSTRUCTIONS.
SAVE THE MANUAL FOR FUTURE REFERENCE!


⚠ WARNING

To avoid electric shock:

- Installation and wiring of luminaire must be in accordance with all applicable local codes.
- Installation, inspection, and maintenance of luminaires should be performed by a qualified electrician.
- DO NOT make or alter any open holes in the luminaire. Do not modify the luminaire.
- DO NOT install damaged product.
- Make sure electrical power is OFF before and during installation and maintenance.
- Make sure the equipment is properly grounded.
- Make sure the supply voltage is same as the rated fixture voltage.

To perform maintenance:

- Only use luminaire in its intended location.
- Make sure the luminaire is not covered with material that will prevent convection or conduction cooling.
- It's suggested to perform visual, electrical, and mechanical inspections on a regular basis.
- Allow luminaire to cool before handling. Do not touch enclosure or light source.

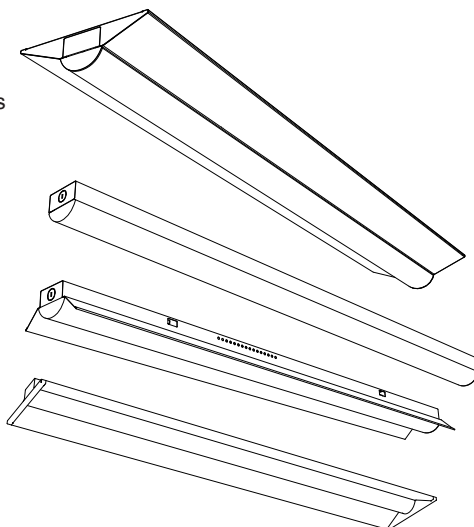

LUMINAIRE PARAMETER

Working Temperature	-20℃~+45℃	Storing Temperature	-20℃ ~ +65℃
Working Humidity	15% ~ 90%RH	IP Rating	IP20


WHAT COMES IN THE PACKAGE

1.Lamp Body	1	<input checked="" type="checkbox"/>
2.Installation Manual	1	<input checked="" type="checkbox"/>
3.Warranty Card	1	<input checked="" type="checkbox"/>
4.Quality Certification	1	<input checked="" type="checkbox"/>

INSTALLATION


1

Separate the LED unit from the luminaire body, then disconnect the safety cable and power line.

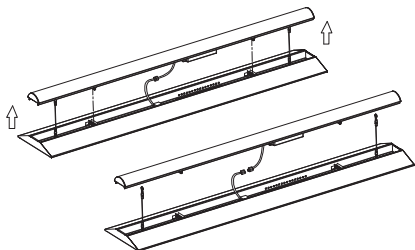


2

Fix the luminaire by screws.

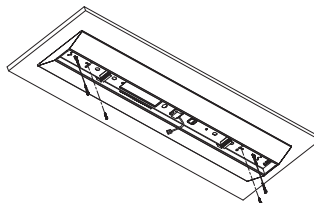


3

Wiring correctly.

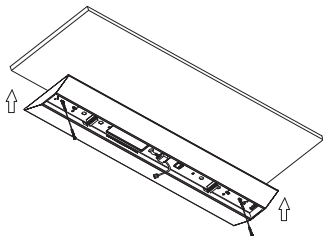


4

Connect the LED unit and the luminaire body by the safety cable, then connect the power line.

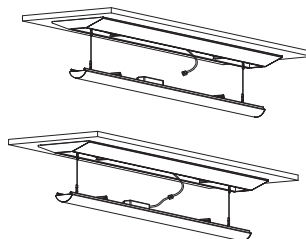

5

Align the metal bracket of the LED unit and the luminaire body, then push the LED unit toward the luminaire body until it is tightly fixed.

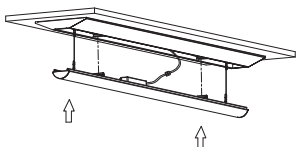

6

Finished.

